

Indicative table of sowing seeds SR250



GEARBOX LEVER'S POSITIONING	QUANTITY of seeds kg/ha															
	RYE		WHEAT		TRITICALE		BARLEY		OATS		RAPE		MUSTARD		LUPIN	
	I	II	I	II	I	II	I	II	I	II	I	II	I	II	I	II
2											1,1	2,2				
4											1,9	3,5				
6											2,7	5,2	3,3	5,9		65
8											3,6	6,6	4,2	7,7		89
10		59		63		56		76		44	4,4	7,8	5,5	9,4	58	105
12		76		76		69		95		51	5,2	9,7	6,5	11,3	70	127
14	47	89	52	89	44	84	60	111	33	62	6	10,7	7,5	14,1	80	146
16	56	104	62	104	52	97	68	129	37	69	6,9	12,2	8,6	15,8	93	170
18	64	120	73	119	59	110	77	149	43	79	7,8	13,6	9,7	18	106	194
20	72	134	81	134	67	125	89	164	49	91	8,7	15,6	10,8	20	117	216
22	82	153	91	152	76	139	99	190	56	102	9,6		11,9	23	132	243
24	92	170	104	166	86	158	113	209	61	114	10,5		13,6	25	147	273
26	103	188	117	184	95	178	125	234	72	126	11,8		14,9	28	165	
28	116	212	130	204	106	197	139	259	76	142	13		16,9	31	179	
30	130	233	142	226	120	217	151	286	85	155	13,8		19		198	
32	141	265	156	251	130	239	172		90	174	14,5		21		216	
34	164	288	170	276	145	269	188		102	190	15,2		23		242	
36	174		190		158	295	209		112	213			25			
38	188		218		174		231		122	234			27			
40	210		233		194		250		138	257			30			
42	231		255		214		284		154	283						
44	249		275		230		300		167							

Positioning the bottoms lever (from the top)	1		1		1		2		2		1		1		3	
Positioning the baffle on groove (from the bottom)	2		2		2		1		1		2		2		2	

TYPE OF SPLIT SEED WHEELS*	SZ	SZ	SZ	SZ	SZ	SZ	SZ	SZ	SZ	SZ	W	W	W	W	SZ	SZ
	SZ – WIDE AND NARROW WHEEL WORKING TOGETHER										W – ONLY NARROW WHEEL WORKING (WIDE WHEEL LOCKED)					

Roman numbers I and II mean gear in the gearbox.
The factory gear is set to speed II.

REMEMBER! The table is indicative only.

For obtaining precise dosing it is necessary to calibrate the seeder.

NUMBER OF SPINS	WHEEL	Number of seeding coulters: 21	
		1753 / ha 17,5 / ar	
	CRANK	GEAR	
		I	II
	990 / ha 9,9 / ar	1849 / ha 18,5 / ar	